

# Step by Step Installation Instructions for Installing your Turn@bout®



You will need the following tools for installation

- Power Drill
- Tape Measure
- Pencil

Installation Kit Includes: Turn@bout®, drill bit, hex wrench and template for drilling holes.



Turn@bout®

Patented &  
Pat. Pending

Four Cap Screws



Drill Bit

Hex Wrench



Template

## Step 1: Measure & Mark

Raise pallet jack to full height.


**For 48" forks.**

Measure 21" from back of pallet jack, and mark both forks.

**For 42" forks.**

Measure 18" from back of pallet jack, and mark both forks.


MEASURE 21" FROM BACK AND MARK

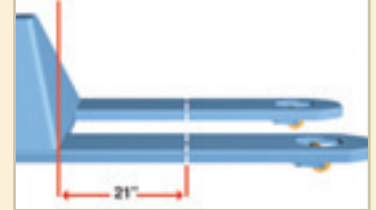

## Step 2: Attach Template

Align side of template with mark as shown.

Place template flat on top of fork and slide to outside edge.

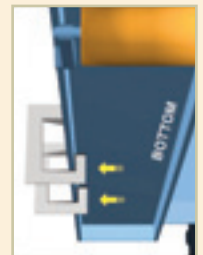


## Step 3: Drill Holes

Hold template firmly in place - drill one hole.

Temporarily drop-in one screw to help keep template in place.

Drill other hole.

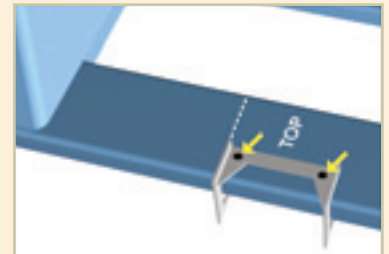


## Step 4: Install

Place Turn@bout® as shown and install screws.

Repeat all steps for other side/fork.

LINE UP THE HOLES AND INSTALL THE  
TWO HEX SCREWS TO THE TURN@BOUT®

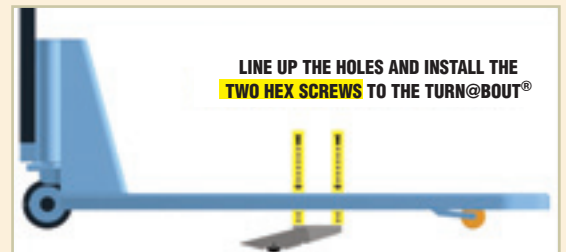

## Installation Complete

You are done! Enjoy the increased maneuverability by 72%. And no more wide turns or having to kick or wrestle the pallet jack into position.

